

Figure 4

- Turning the handle to the position D will allow water to flow into the valve from the discharge source of the engine (Figure 4)

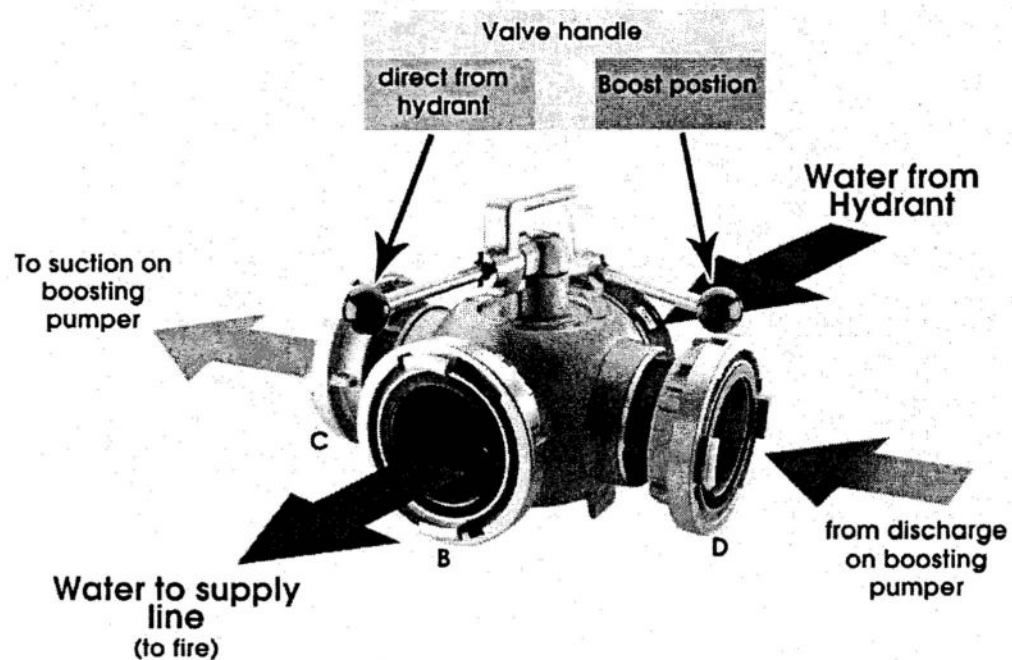


Figure 5

- Figure 5 shows the flow of water through the valve.